 


OLYMPUS®

DIGITAL VOICE RECORDER


DS-5000
DS-5000iD

Quick Start Guide

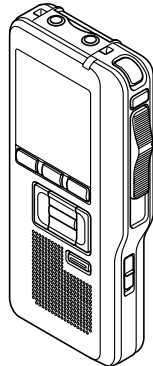

Getting Started

Display Status Indicators

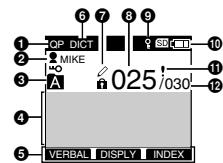


- | | |
|------------------------------------|--|
| 1 Record mode indicator | 8 Current file number |
| 2 Author ID indicator | 9 SD card Lock indicator |
| 3 Current folder | 10 Battery indicator |
| 4 Character information display | 11 Priority indicator |
| 5 Button guide display | 12 Total number of files in the folder |
| 6 Microphone sensitivity indicator | ENC Encryption indicator |
| 7 Pending indicator | ERASE Erase Lock indicator |
| | CARD Card indicator |

Turning ON the Recorder

Slide the power switch to the ON position to activate the recorder.

Power Save Mode

When the recorder is ON but not in use for 10 minutes, by default, it will switch to power save mode automatically. To reactivate the recorder again, operate any button or the slide switch.

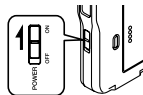



Memory Card

- This recorder uses dual memory in the form of SD card memory and built-in memory (microSD card), allowing you to record to the selected memory.
- By default, the recording/playing destination is set to the [SD Card] at the factory.
- To change the card for recording/playing, use [Card Select] of MENU setting.
- When a card selected through the [Card Select] is ejected, the recording destination will change over to the other card.

Charging Battery Pack

- You can charge the Ni-MH Rechargeable Battery Pack in the recorder using the cradle in combination with the USB cable or AC Adapter. Or by directly connecting the AC Adapter or USB cable to the recorder.
- When you charge the battery, connect the USB cable after turning the POWER switch to OFF. Only charging will be performed, and the computer will not recognize it as a drive.



Recording

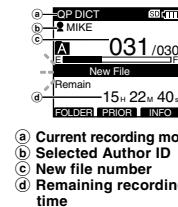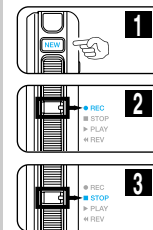

- Ⓐ Current recording mode
- Ⓑ Selected Author ID
- Ⓒ New file number
- Ⓓ Remaining recording time

- 1 Press the **NEW** button to create a new file.
- 2 Move the slide switch to the **REC** position to start recording.
The record/play indicator light glows red. Aim the microphone at the sound source. When you press the F2 (DISPLY) button during recording, you can change the LCD screen displays.
- 3 Move the slide switch to the **STOP** position to stop recording.
If you want to append additional recordings to the same file, move the slide switch to the REC position again.

Overwrite Recording

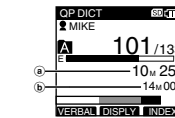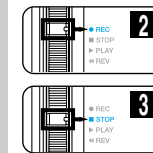

- Ⓐ Recording elapsed time
- Ⓑ Total recording time of the selected file

You can overwrite a previously recorded file from any point within the file. Note that the overwritten recordings will be erased.

- 1 Select and play the file you want to overwrite.
Stop playback at the starting point of overwrite.
- 2 Move the slide switch to the **REC** position to start overwriting.
The record/play indicator light glows red.
- 3 Move the slide switch to the **STOP** position to stop overwriting.

OLYMPUS®

OLYMPUS IMAGING CORP.
Shinjuku Monolith, 3-1, Nishi-Shinjuku 2-chome, Shinjuku-ku, Tokyo 163-0914, Japan.
Tel. 03-3340-2111

OLYMPUS IMAGING AMERICA INC.
3500 Corporate Parkway, P.O. Box 610, Center Valley, PA 18034-0610, U.S.A.
Tel. 1-800-553-4448

OLYMPUS EUROPA GMBH
(Premises/Goods delivery) Wendenstrasse 14-18, 20097 Hamburg, Germany.
Tel. 040-237730
(Letters) Postfach 10 49 08, 20034 Hamburg, Germany.


OLYMPUS UK LTD.
Vision House 19, Colonial Way Walford Hertfordshire WD24 4JL, United Kingdom.
Tel. 001923-83-1100
<http://www.olympus.com>

E1-BS0040-01
AP0712

E1-BS0040-01-INST E1 2007.12.21

Black Cyan



Playing

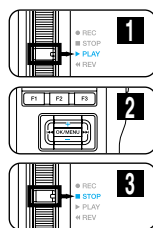

- 1 Select the file, then move the slide switch to the **PLAY** position to start playback.
- 2 Press the **+** or **-** button to adjust the volume.
- 3 Move the slide switch to the **STOP** position at any point you want to stop the playback.

Playback functions	Operation
Fast Forward	Press the FF button once while stopped.
Rewind	Press the REW button once while stopped.
Cue	Hold the FF button while stopped or playing a file.
Review	Hold the REW button while stopped or playing a file. Move the slide switch to the REV position.
Playback Speed	Press the F2(SPEED) button during playback. Every time the F2(SPEED) button is pressed, the playback speed will switch. Play(playback):Normal speed. Slow Play (slow playback): -50% Fast Play (fast playback): +50%

Erasing a File

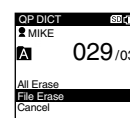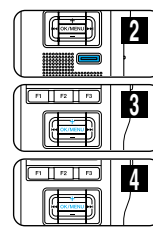

- 1 Select the file you want to erase.
- 2 Press the **ERASE** button.
- 3 Press the **+** button and select **[File Erase]**, then press the **OK/MENU** button.
- 4 Press the **+** button and select **[Start]**, then press the **OK/MENU** button.
The display changes to **[File Erase !]** and erasing will start.

[Erase Done] is displayed when the file is erased.
File numbers will be reassigned automatically.

Menu List

Menu Setting (while the recorder is stopped, press the **OK/MENU** button)

Menu	Function	Setting
File Menu	Pending	Finished / Pending
	Lock	Off / On
	Priority	Cancel / Set
Record Menu	Work Type	Edit of Work Type / Option Item.
	Rec Mode	QP / SP
	VCVA	Off / On
Display Menu	Mic Sense	Dictation / Conference
	Backlight	On / Off
	LED	On / Off
Device Menu	Contrast	Adjustment 1 to 12 (Default is 6).
	Language	English, Deutsch, Français, Español, Italiano, Pycckom
	Fingerprint	Enroll / Verify
	Card Select	SD / microSD
	Beep	On / Off
	Format	Initializes the card (SD/microSD).
	USB Class	Composite / Storage
	Time & Date	hour, minute, year, month, and day.
	Power Save	5min., 10min., 30min., 1hour and Off.
	Reset Settings	Return the menu settings to their initial state.
Card Info.	SD/microSD (Remain, Capacity)	
System Info.	Model Name/Version/Serial	

* The selectable language varies depending on the countries where the product was purchased.

**[Fingerprint] is a menu item for the DS-5000iD only (it will not appear on the DS-5000).

Alarm Message List

Message	Action
Battery Low	Charge the battery pack or replace with new batteries.
Power Supply Error	Use the included AC Adapter.
File Protected	Unlock the file.
Index Full	Erase index marks that are no longer required.
Folder Full	Erase unnecessary files.
Erase Error	Erase once again. When an Erase Error occurs format the card.
Card Error	Insert a compatible card.
Memory Full	Erase files that are no longer required or insert another card.
Format Error	Reformat the card.
System Error	This is a malfunction. Contact the place of purchase or Olympus Service Center for repair.
Insert Card	Insert a card.